CODE™ 7379
CONSOLE

BDi

Product Registration

Registering your new BDI product allows us to send you important product updates, service information and helpful hints related to your BDI products. Register today, and you will be entered to win free a BINK table from BDI: www.bdiusa.com/register

Placement and Maintenance

Your Code Console is designed for indoor use on level floors. Clean painted surfaces and steel parts with a damp cloth.

Code is engineered for easy assembly. Carefully follow this procedure to prevent any damage. Do not use power tools for assembly of this product.

Step 1

Unpack and identify the parts listed below. The assembly workspace should be a non-marring surface such as carpet. For missing hardware pieces, contact BDI Customer Service at: customerservice@bdiusa.com.
For all other concerns, please contact your BDI retailer.

T1 Hex Wrench x 1

H1 1/4-20 x 10 mm Flat head Screw x 8
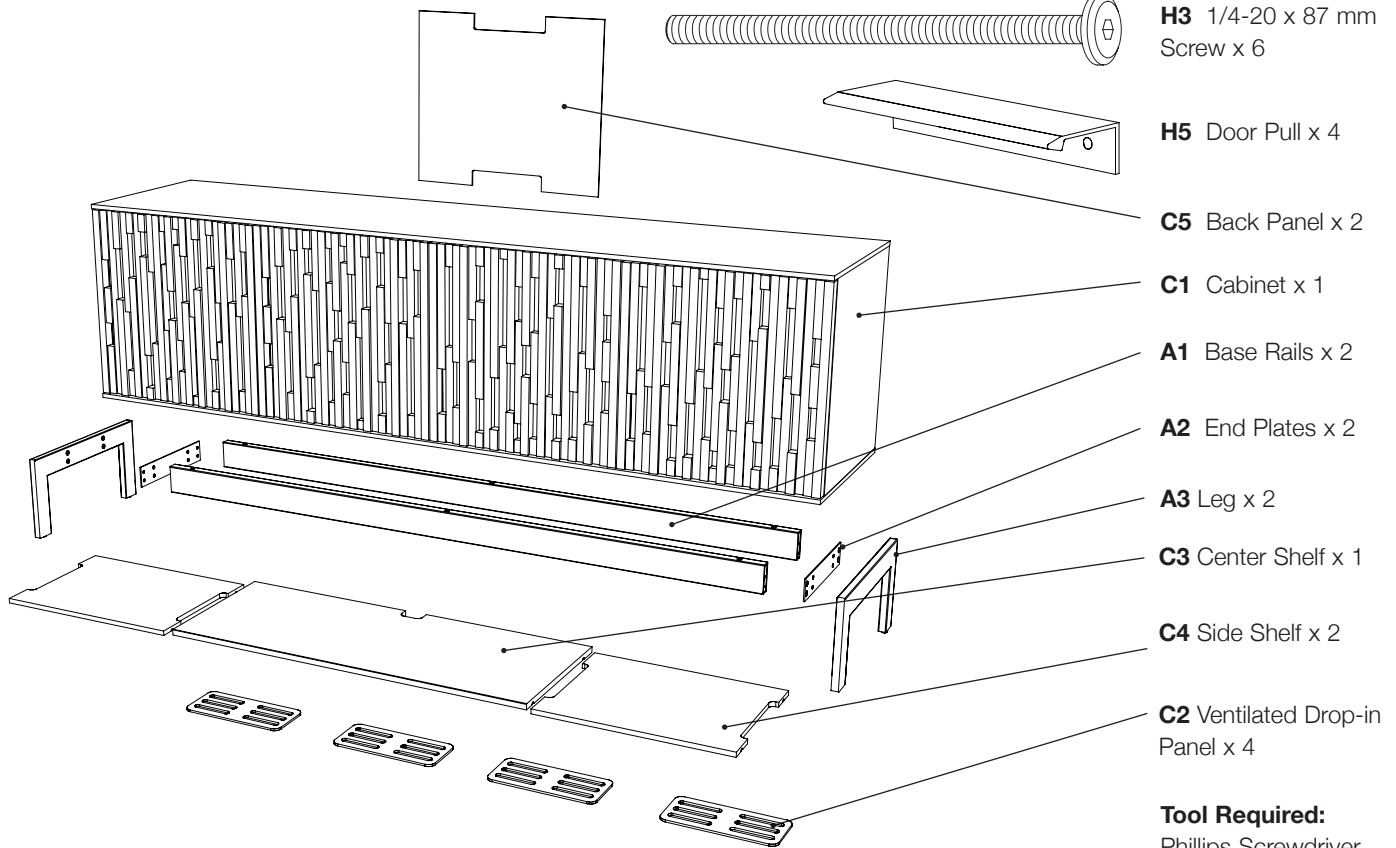
H2 1/4-20 x 12mm Screw x 8

**H4** #6 x 12 mm Wood Screw x 8

H3 1/4-20 x 87 mm Screw x 6

H5 Door Pull x 4

C5 Back Panel x 2

C1 Cabinet x 1

A1 Base Rails x 2

A2 End Plates x 2

A3 Leg x 2

C3 Center Shelf x 1

C4 Side Shelf x 2

C2 Ventilated Drop-in Panel x 4

Tool Required:
Phillips Screwdriver

Step 2 - Assemble the base

Position both **base rails A1** on a padded floor with the threaded holes on the ends facing up. Orient the **2 end plates A2** as shown with countersunk holes on the outside. Attach both **end plates A2** to the **base rails A1** with **flathead screws H1** going through the countersunk holes. Tighten screws with **hex wrench T1.**

H1 x 8   **T1**

H1

A2

H1

A2

A1

A1

A2
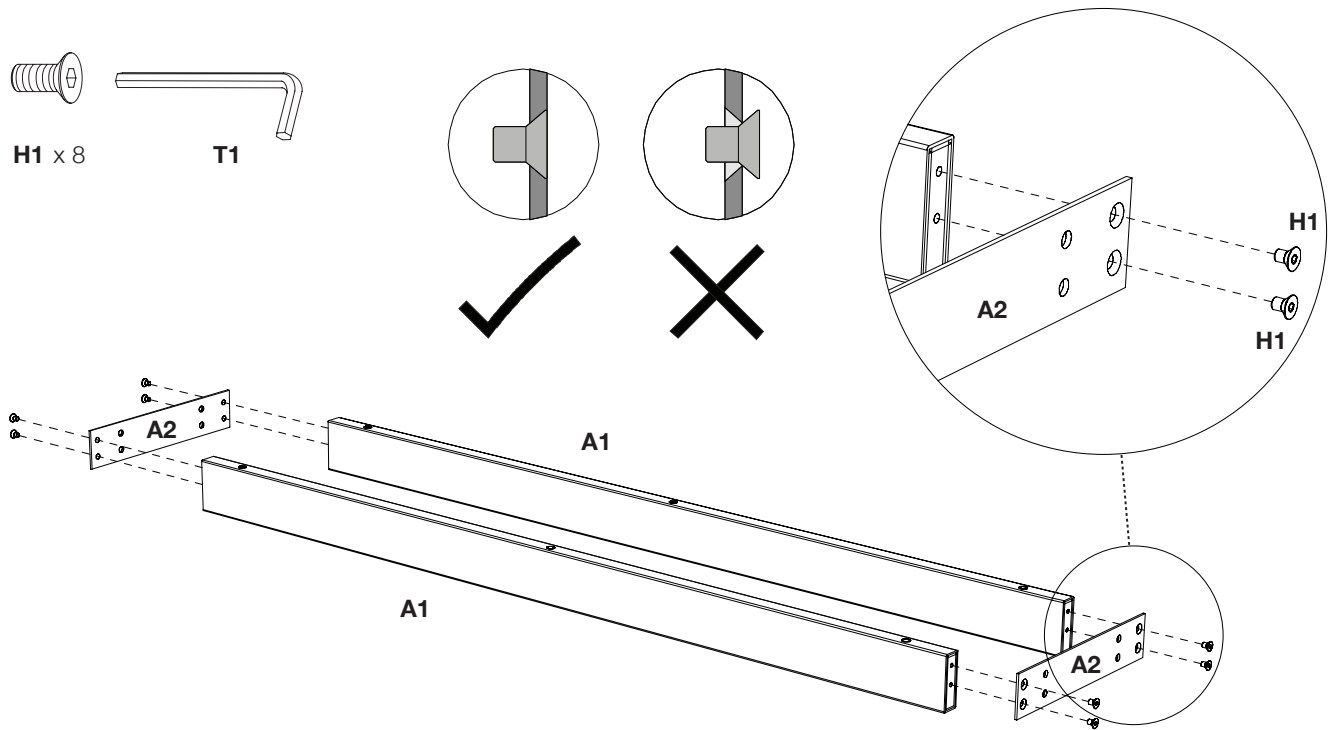
Step 3 - Attach the legs

Attach the **legs A3** to the base frame using **screws H2** and **hex wrench T1**.

A3

H2

H2

H2 x 8

A3

BDi **CODE** 7379
MEDIA CONSOLE

bdiusa.com
customerservice@bdiusa.com
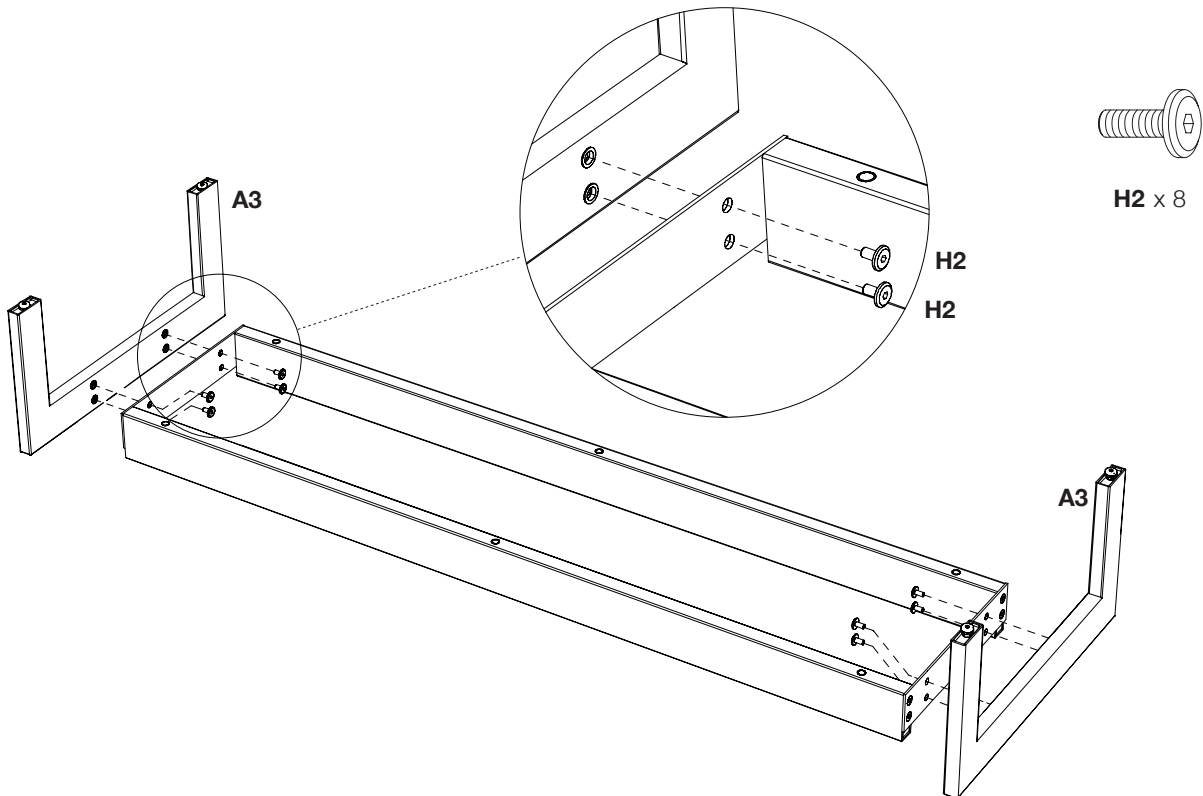
Step 4 - Attach the base

With help from another person, carefully position the cabinet on its back. Attach the **base** using **screws H3** and **hex wrench T1** going through the holes on the base rails and into the threaded holes on the bottom of the cabinet.

2 Person Task

H3

H3

H3

H3

H3

H3

T1   H3 x 6
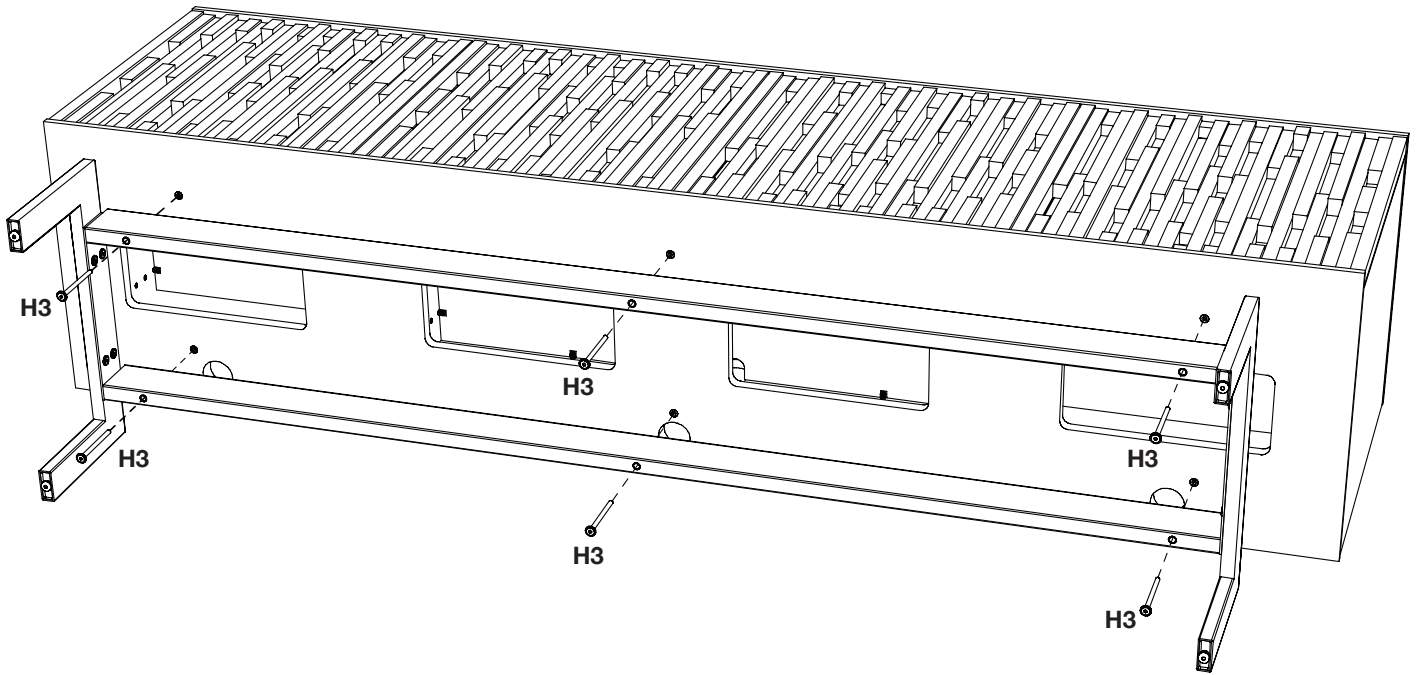
## Step 5 - Stand Up / Attach Door Pulls / Adjust shelves

With help from another person, carefully position the cabinet onto its base. Open the doors and attach the **4 door pulls H5** using **8 wood screws H4** and a **Phillips screwdriver**. The shelves in your Code Media Console are adjustable. Shelf pins may be unscrewed and moved up or down. Place the 4 ventillated drop-in panels inplace as shown.

Step 6 - Level your unit

Levelers are integrated into each leg assembly and are accessed at the bottom of each cabinet leg. If your floor is uneven, you may extend one or more levelers to attain a level, stable cabinet placement. Turning the leveler clockwise will extend the leveler; turning it counter-clockwise will retract it.

H4

Phillips Screwdriver

2 Person Task

H5

C2

Shelf Pins

Ventilated Drop-in Panels

Levelers
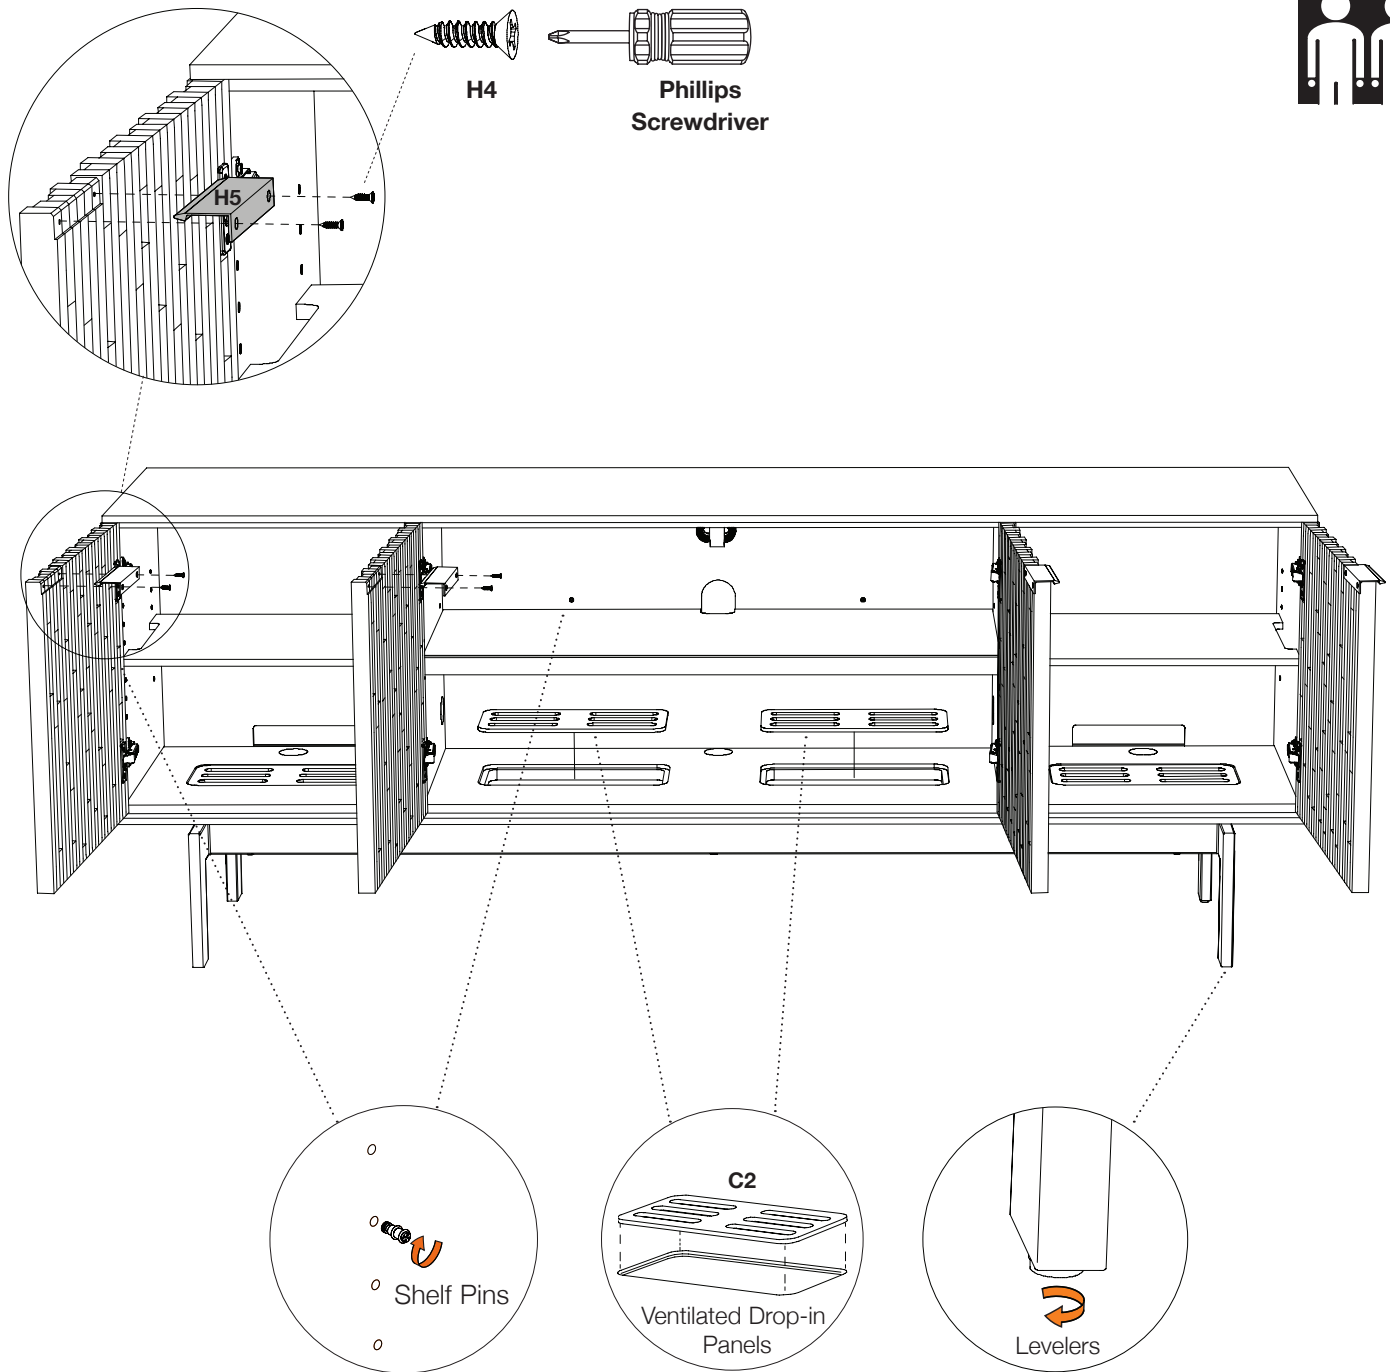
Step 7 - Install both **back panels C5** to the backside of the cabinet by inserting the top edge in the upper slot then tipping the bottom edge forward and into the lower slot. The **back panels C5** can also slide horizontally towards the center of the cabinet to easily plug in media components.

Step 8 - Your Code Console is equipped with a TV safety strap. Find the strap bundle inside the cabinet and push it through the mouse hole so that it hangs out the back. Follow the instructions on the hang tag to attach the loose ends of the strap to your TV.

C5

1

2

C5

TV Saftely Strap
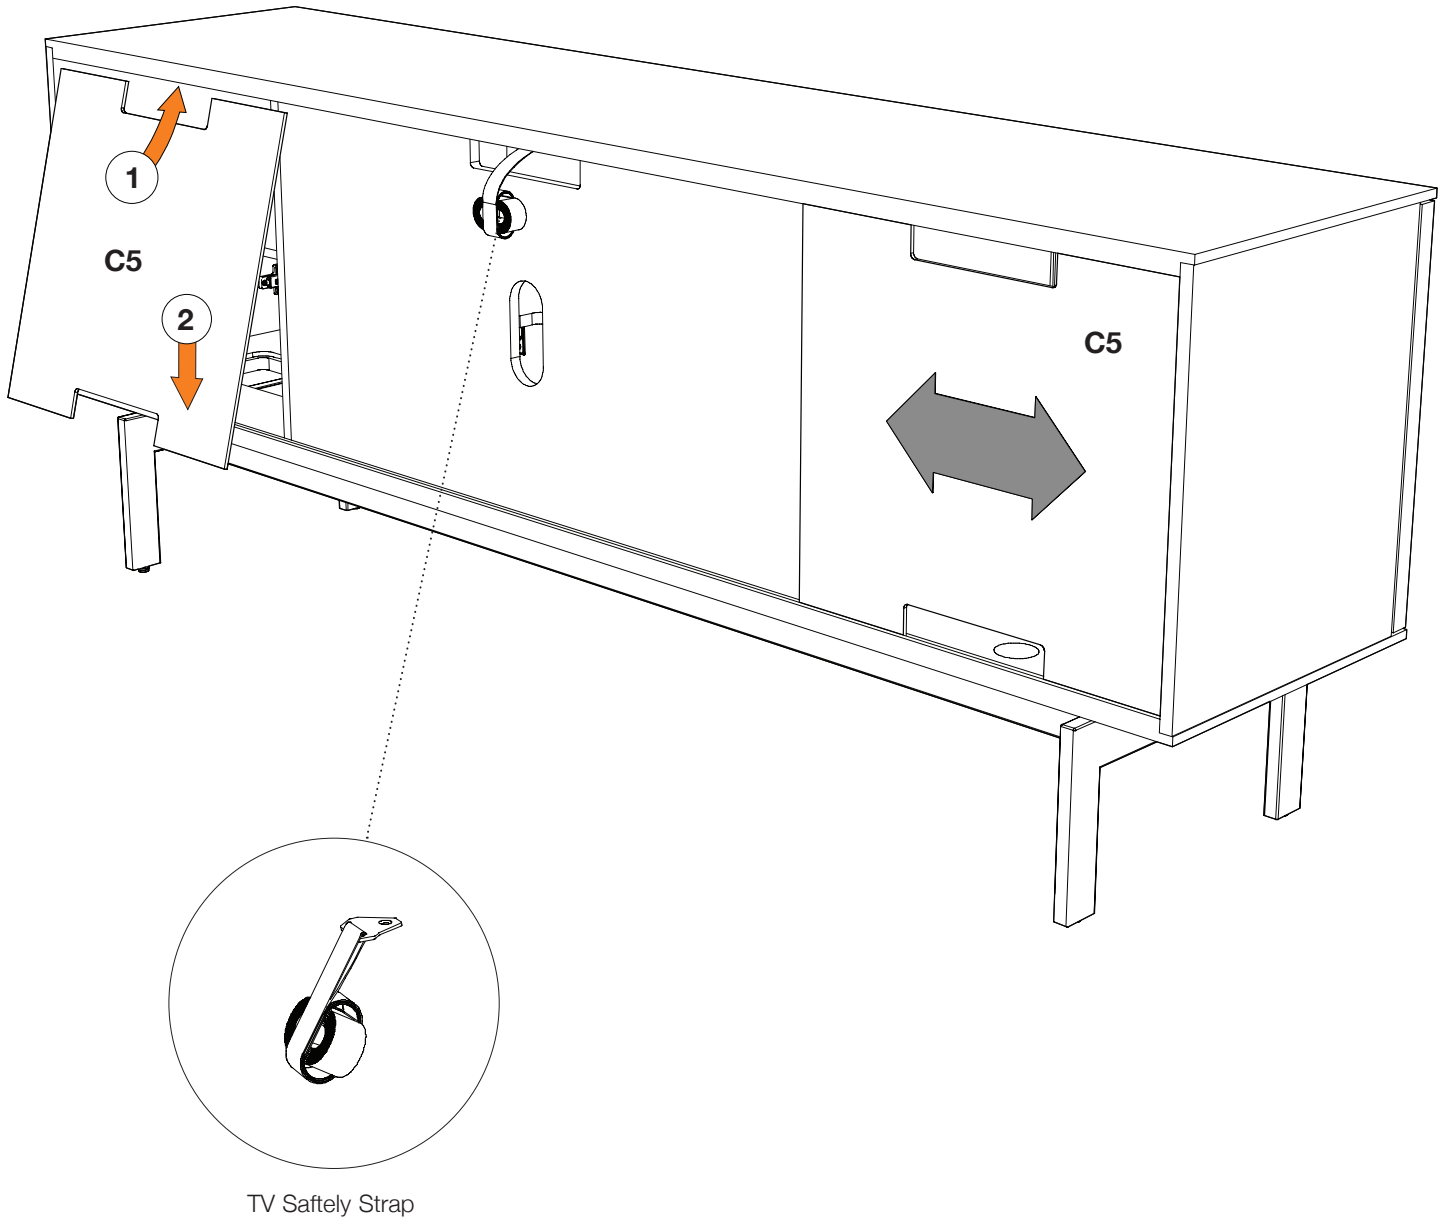
Step 8 - Adjust Door Hinges (if needed)

The doors on your cabinet should be evenly spaced and the doors should open and close freely without rubbing against the door frame. If the cabinet's doors appear out of alignment, this condition can be corrected with minor adjustment to the European hinges on each door. Because these hinges are adjustable, adjusting one hinge element can sometimes cause the need for adjustments to other elements. But with a few adjustments, you can modify the orientation of the cabinet doors to make sure that they hang perfectly within your cabinet.
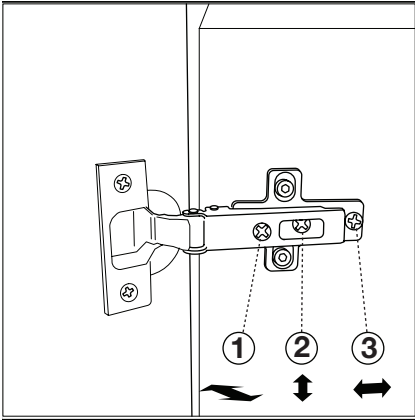
Use the **Phillips Screwdriver T1** supplied to adjust the door hinges:

- By adjusting **Screw 1**, the door will move LEFT or RIGHT within the frame. Make minor adjustments at both top and bottom hinges for best results.
- By adjusting **Screw 2**, the door will move UP or DOWN. For best results, adjust Screw 2 on both the top and bottom hinges.
- By adjusting **Screw 3** the entire door will move IN or OUT, opening or closing the gap between the door frame and cabinet. (This screw rarely needs adjustment.)

Example:
Tightening **Screw 1**
on top hinge will move the
top of the door in the
direction shown
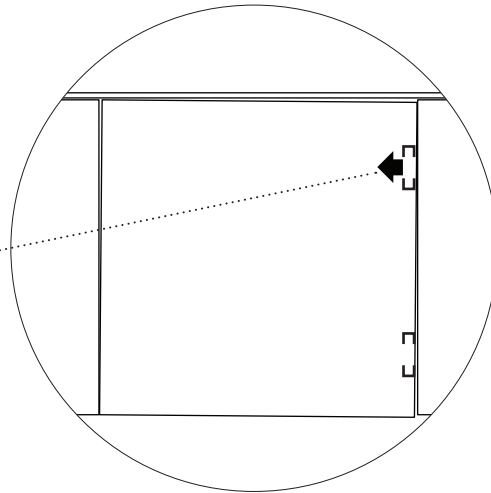
Example:
Adjusting **Screw 2**
on both hinges (same direction)
will move the door up or down