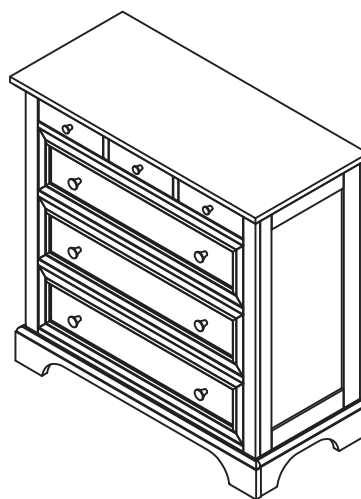
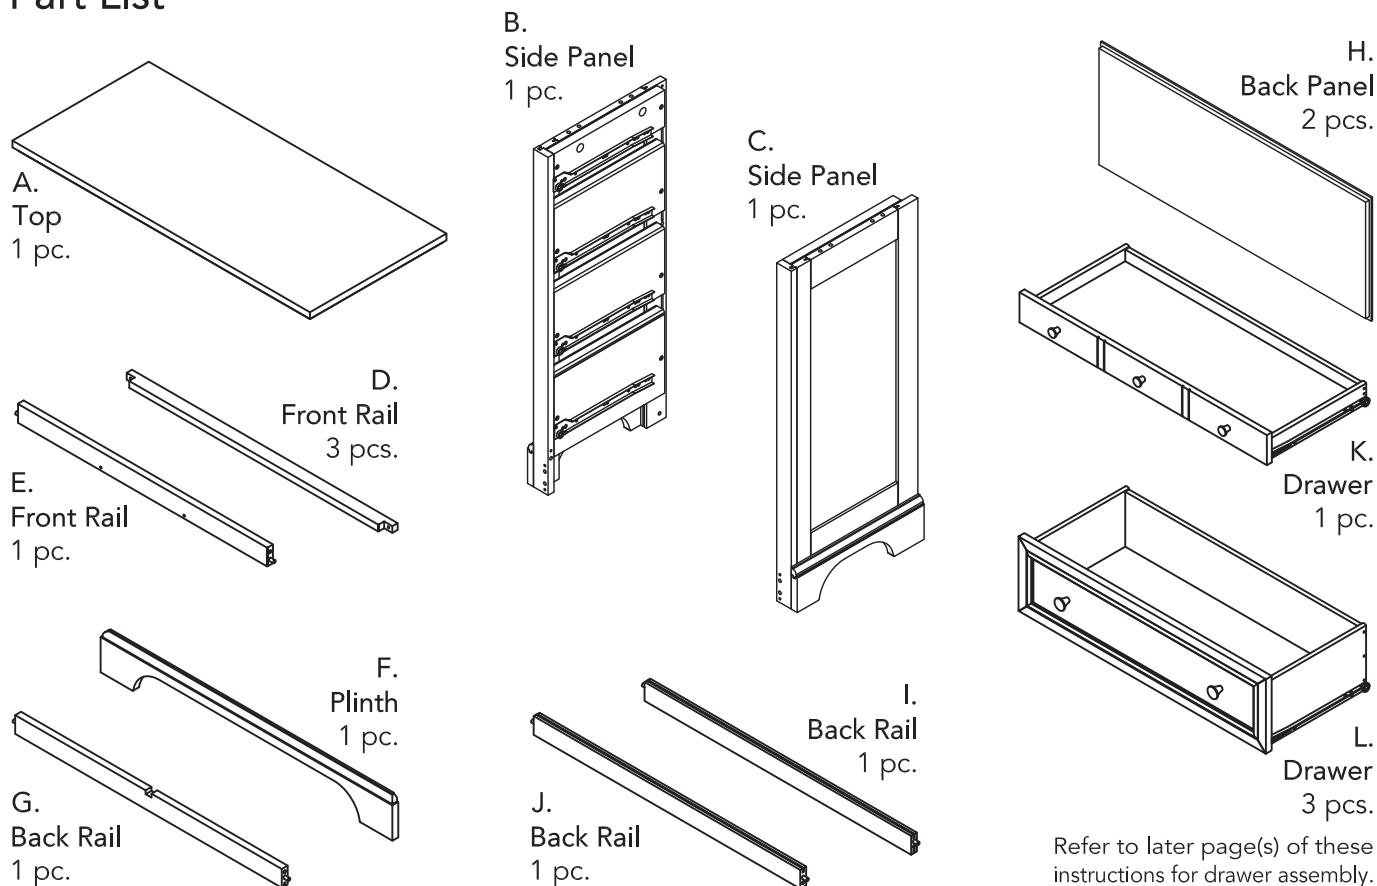
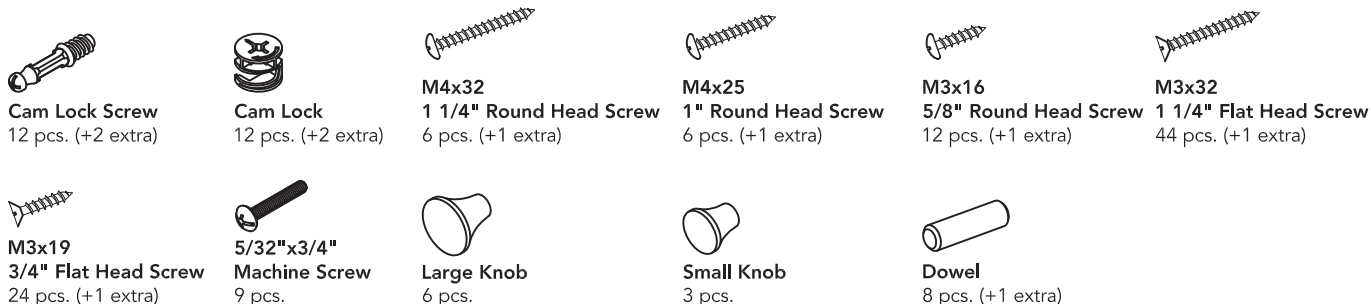


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List****Hardware List**


Tool(s) required for assembly: Phillips screwdriver, Pencil, Drill (8 volts or less), 3/8" Drill Bit

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460

Assembly Instructions 2/10

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.

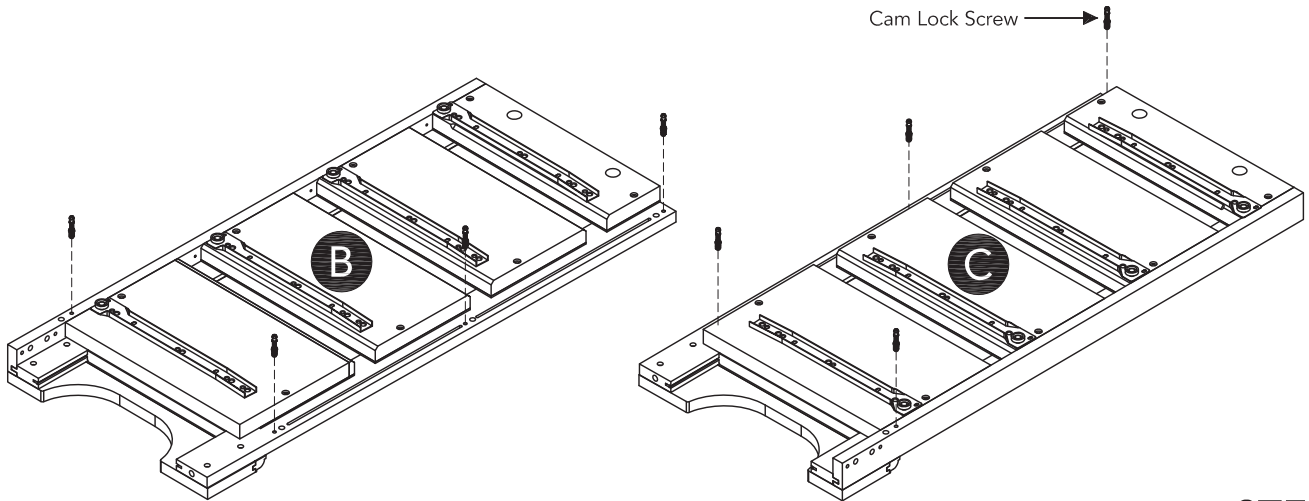

STEP 1

Insert Cam Lock Screws into pre-drilled holes in Side Panels (B) and (C), then tighten.

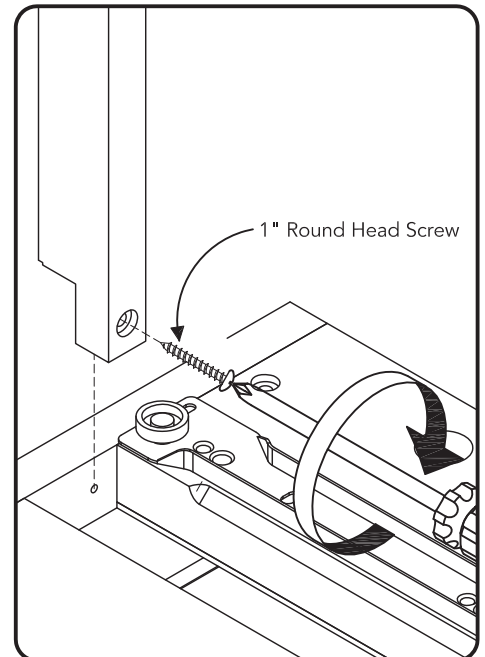
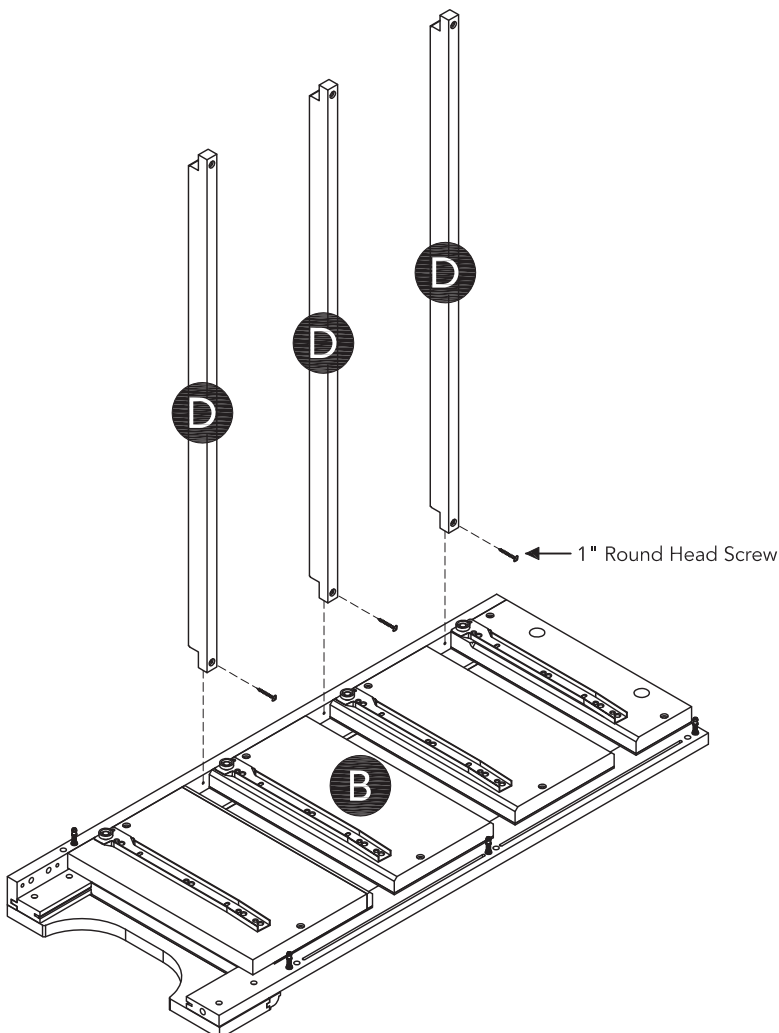


Figure 1

STEP 2

Attach Front Rails (D) to Side Panel (B) with 1" Round Head Screws. (See Figure 1)

Assembly Instructions 3/10

STEP 3

Attach Front Rail (E) and Back Rails (G), (I), (J) to unit with Cam Locks.
(See Figure 2)



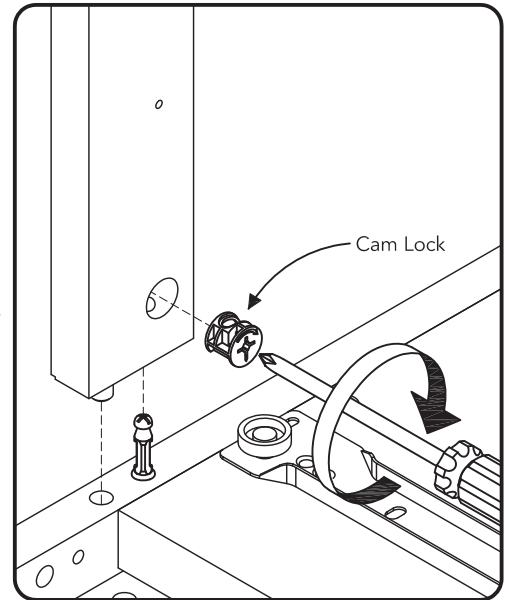


Figure 2

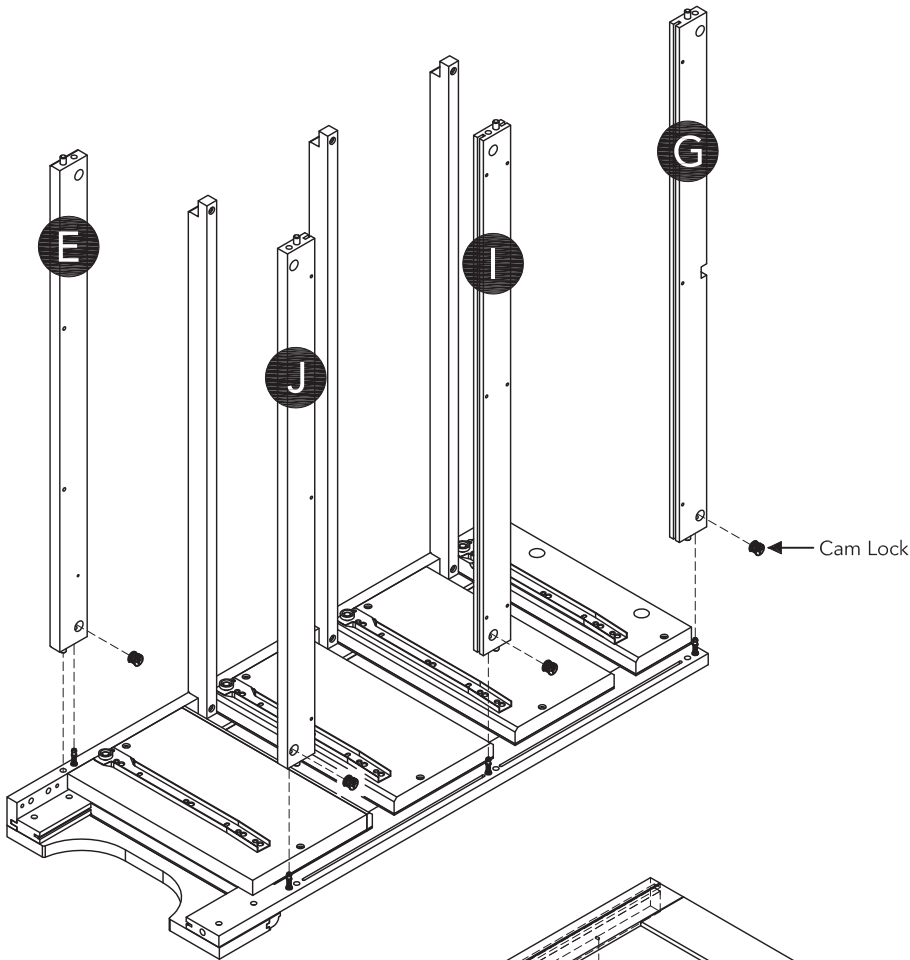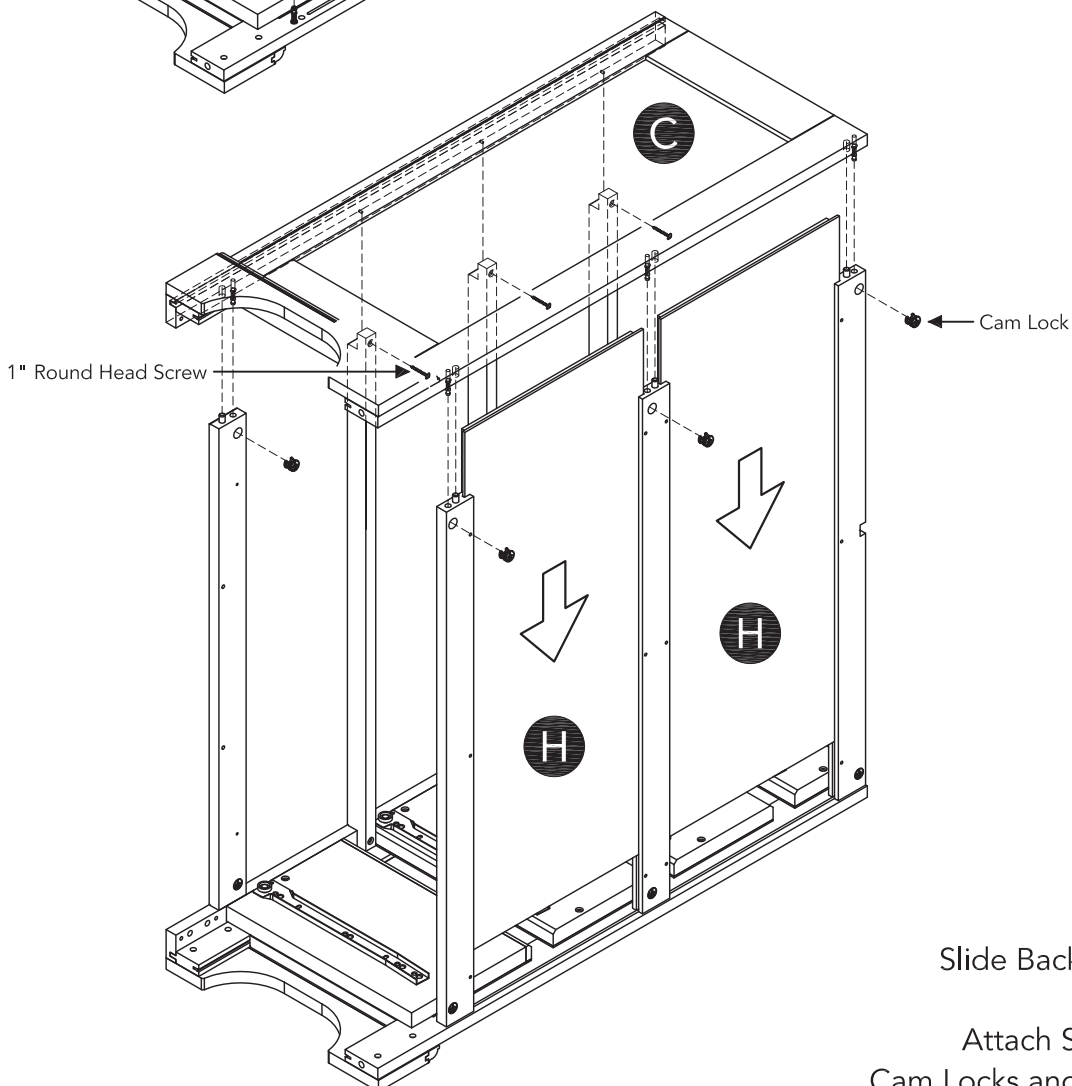

STEP 4



Slide Back Panels (H) into position.

Attach Side Panel (C) to unit with
Cam Locks and 1" Round Head Screws.

Assembly Instructions 4/10

STEP 5

Insert Cam Lock Screws into pre-drilled holes in Top (A), then tighten.

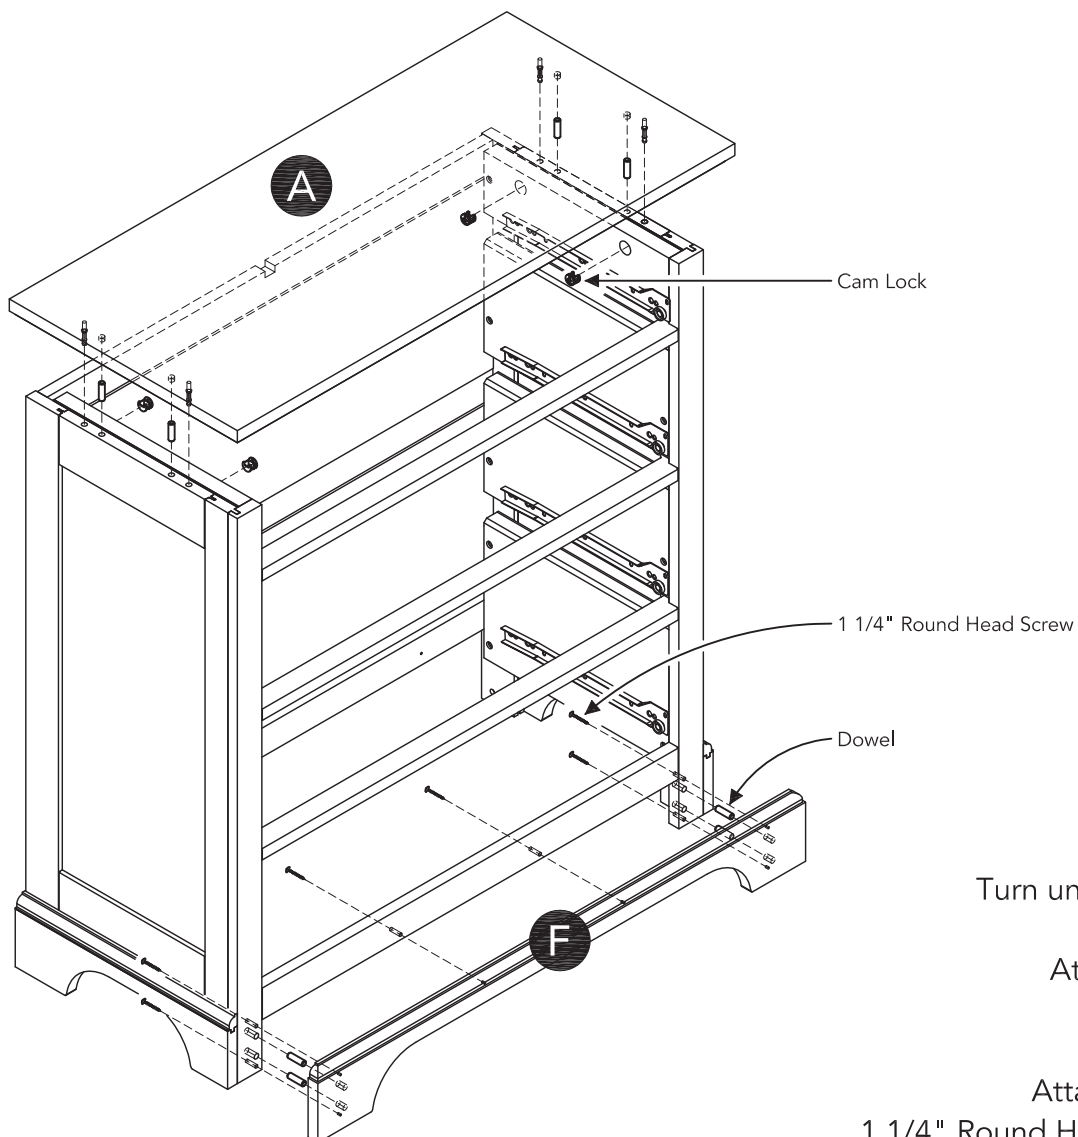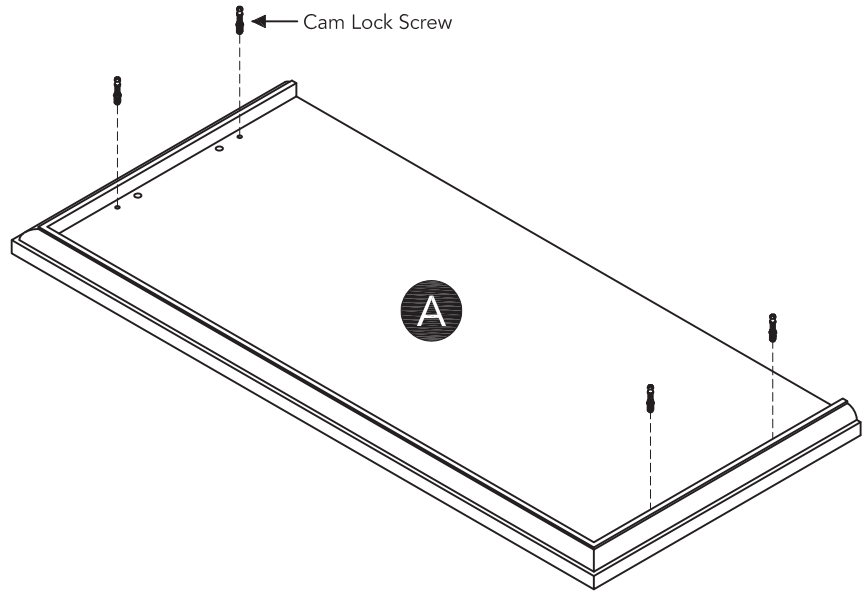

STEP 6


Turn unit to its upright position.

Attach Top (A) to unit with
Cam Locks and Dowels.

Attach Plinth (F) to unit with
1 1/4" Round Head Screws and Dowels.

STEP 7

Insert 5/8" Round Head Screws into pre-drilled holes in unit, then tighten.

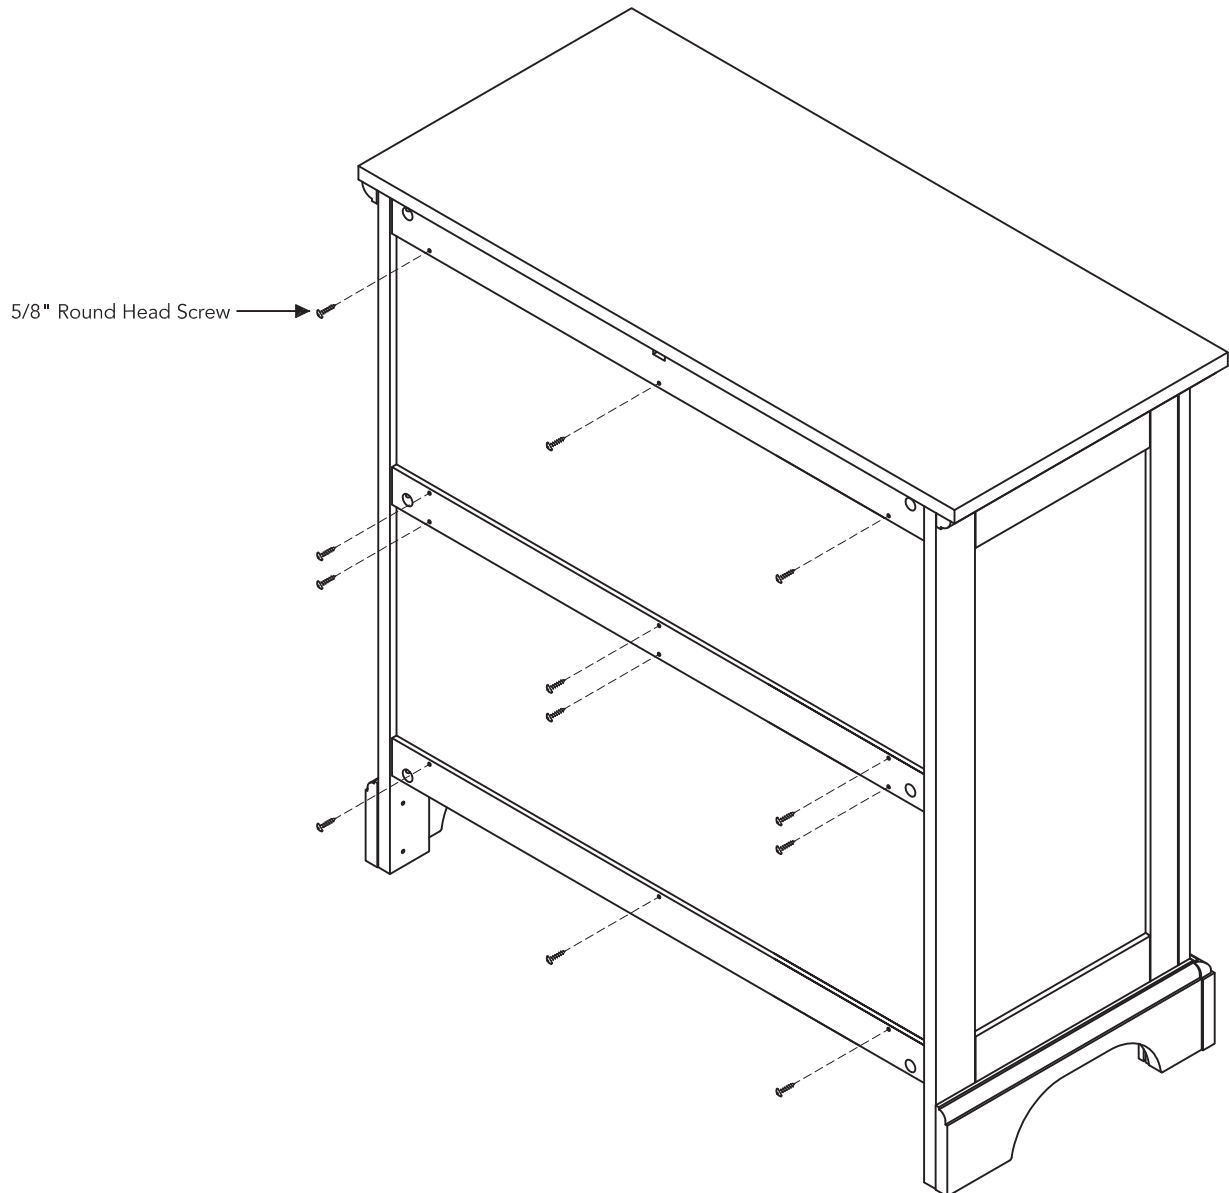

Assembly Instructions 6/10

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 8

Place unit at desired location.

Mark wall with pencil just above and in-line with hole in Back Rail (G). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 1 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tipover Restraint into unit through hole in Back Rail (G). (See Figure 5)

Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

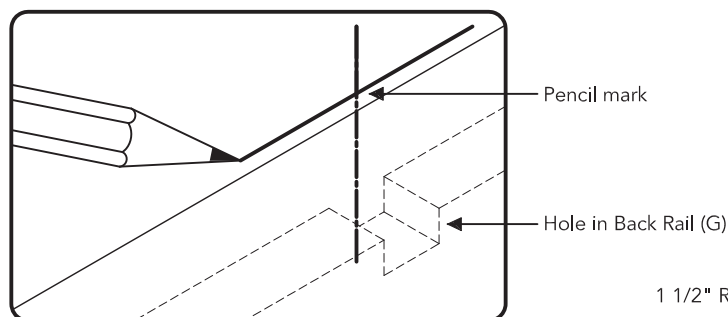
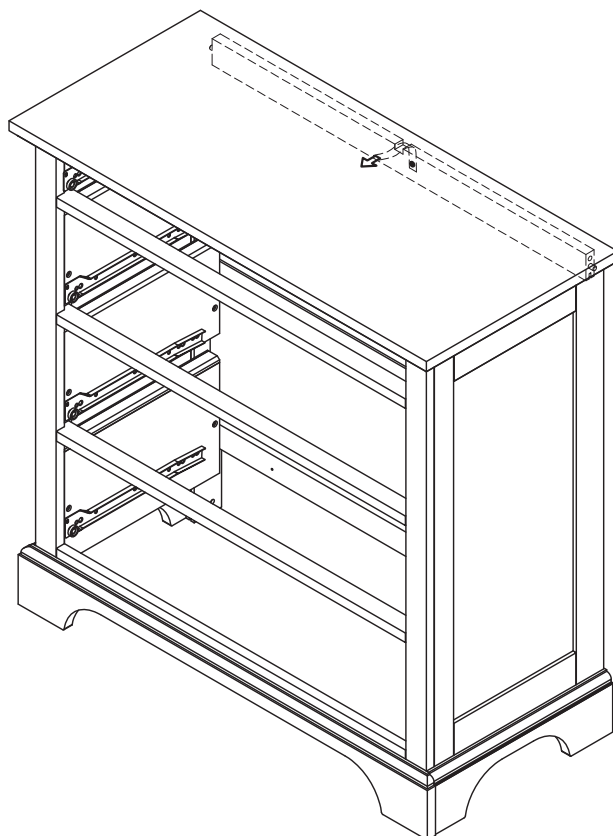


Figure 3

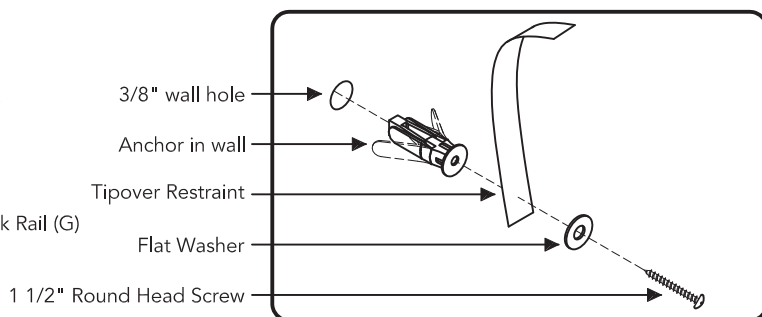


Figure 4

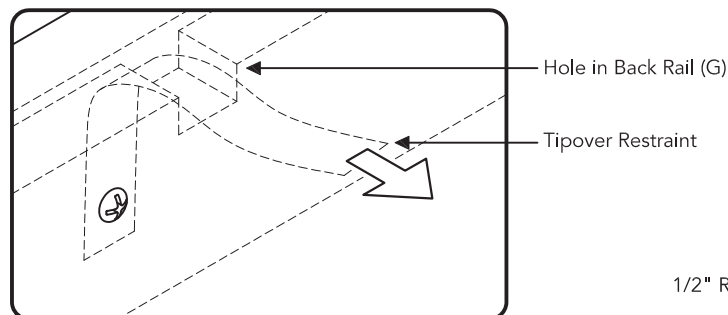


Figure 5

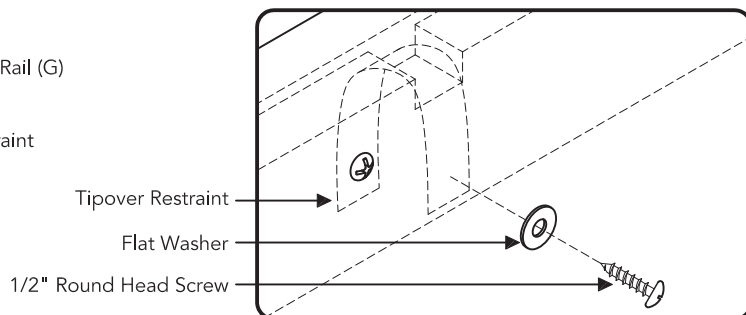


Figure 6

Hardware List



Tipover Restraint
1 pc.



Anchor
1 pc. (+1 extra)



M3x38
1 1/2" Round Head Screw
1 pc. (+1 extra)




M3x13
1/2" Round Head Screw
1 pc. (+1 extra)



Flat Washer
2 pcs. (+1 extra)

Drawer (K)

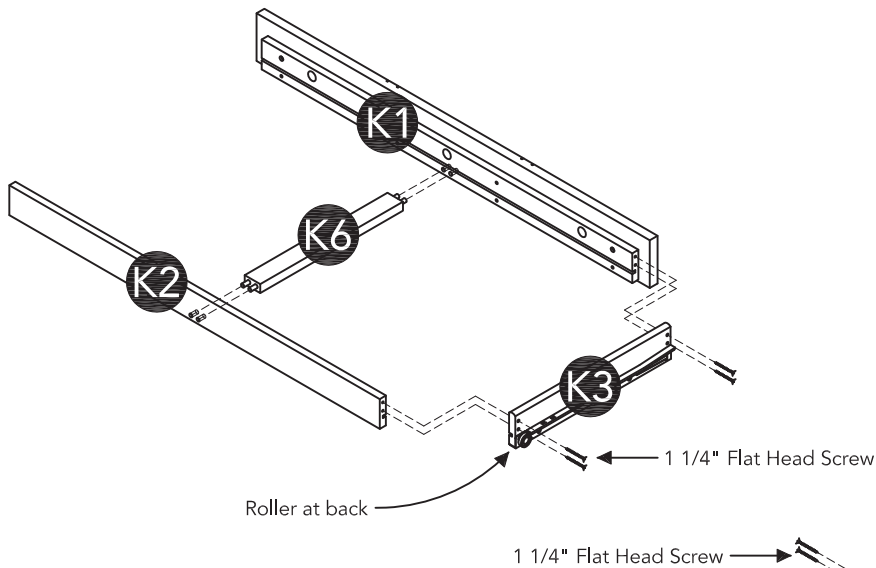

STEP 9



Attach Drawer Support (K6) to Drawer Front (K1) and Drawer Back (K2).

Attach Drawer Side (K3) to Drawer Front (K1) and Drawer Back (K2) with 1 1/4" Flat Head Screws.

STEP 10

Insert Drawer Bottom (K5) into groove.

Attach Drawer Side (K4) to unit with 1 1/4" Flat Head Screws.

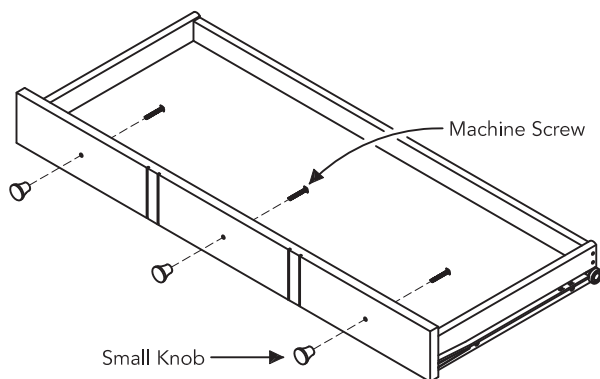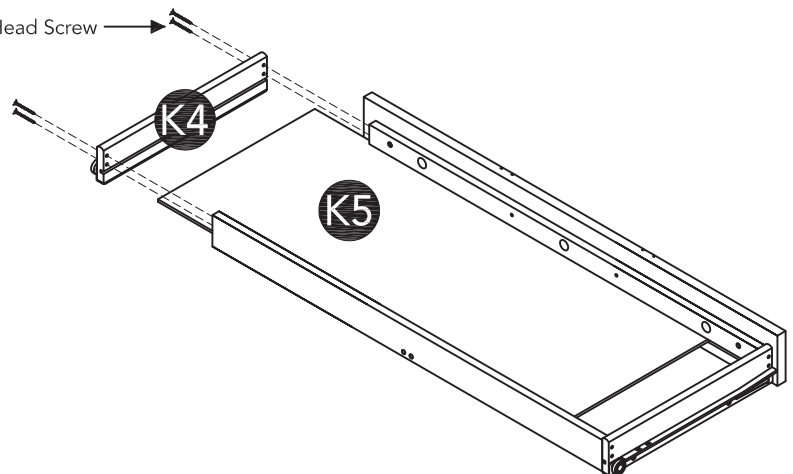


STEP 11


Attach Small Knobs with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List

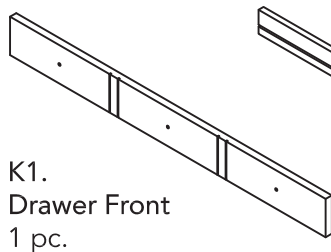

K1.
Drawer Front
1 pc.

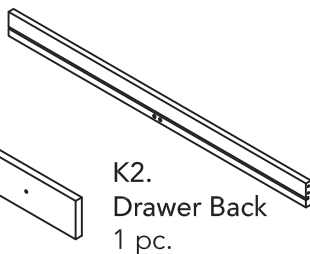


K2.
Drawer Back
1 pc.




K3.
Drawer Side
1 pc.



K4.
Drawer Side
1 pc.

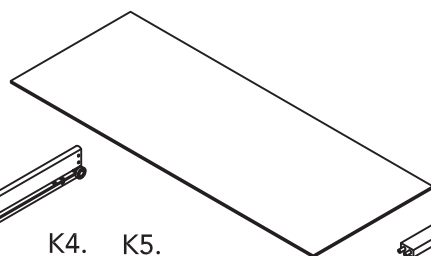


K5.
Drawer Bottom
1 pc.

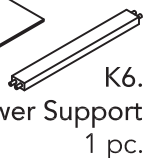

K6.
Drawer Support
1 pc.

Drawer (L)

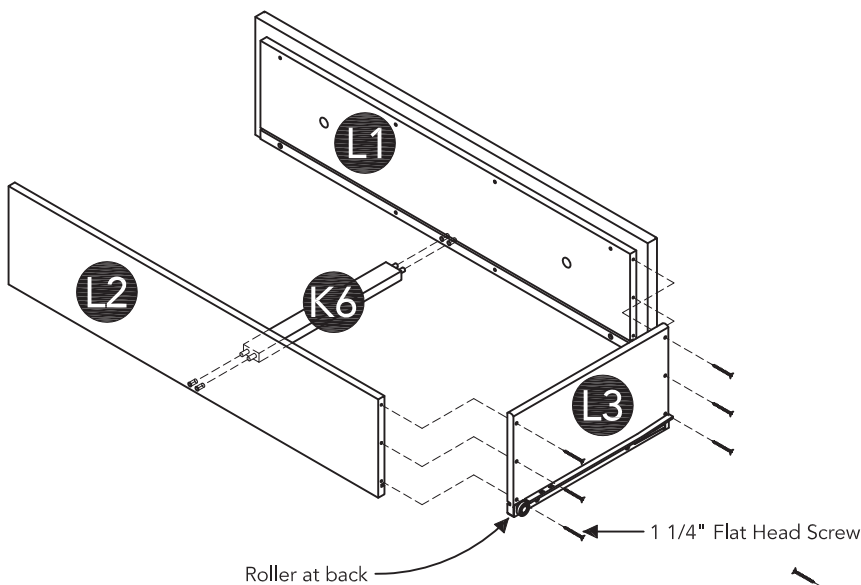

STEP 12


Attach Drawer Support (K6) to Drawer Front (L1) and Drawer Back (L2).

Attach Drawer Side (L3) to Drawer Front (L1) and Drawer Back (L2) with 1 1/4" Flat Head Screws.

STEP 13


Insert Drawer Bottom (L5) into groove.

Attach Drawer Side (L4) to unit with 1 1/4" Flat Head Screws.

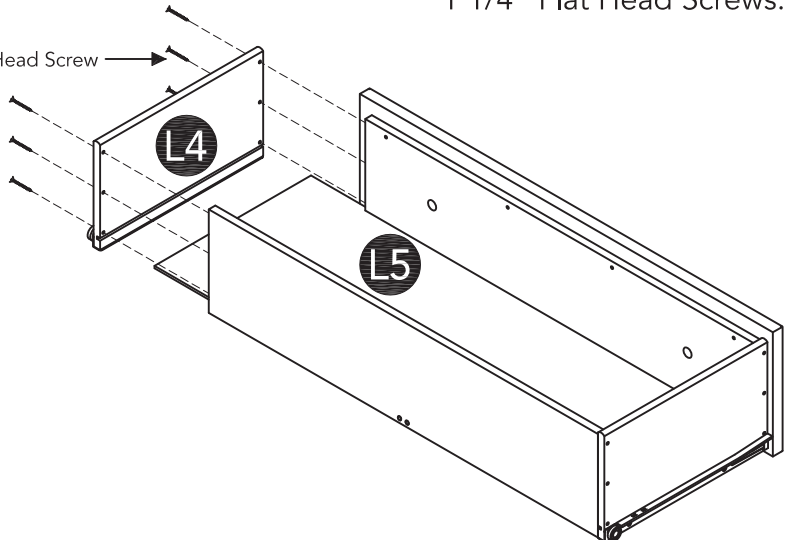


STEP 14

Attach Large Knobs with Machine Screws.

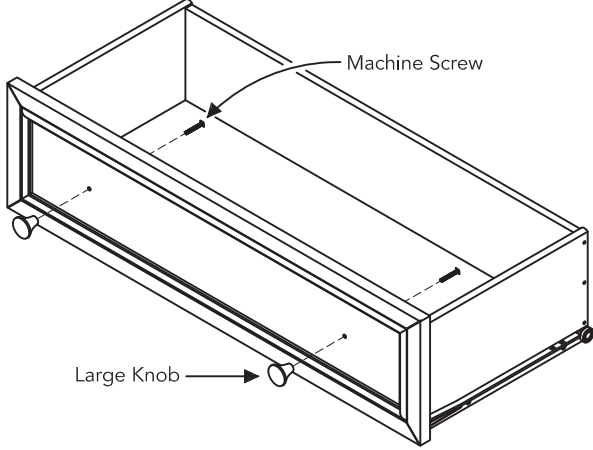

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.



Part List

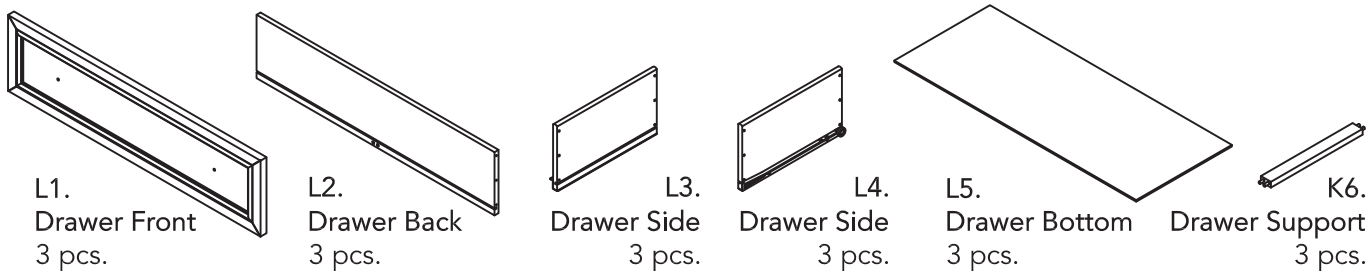

Assembly Instructions 9/10

STEP 15

Loosen slightly screws pre-installed on back of drawer fronts.

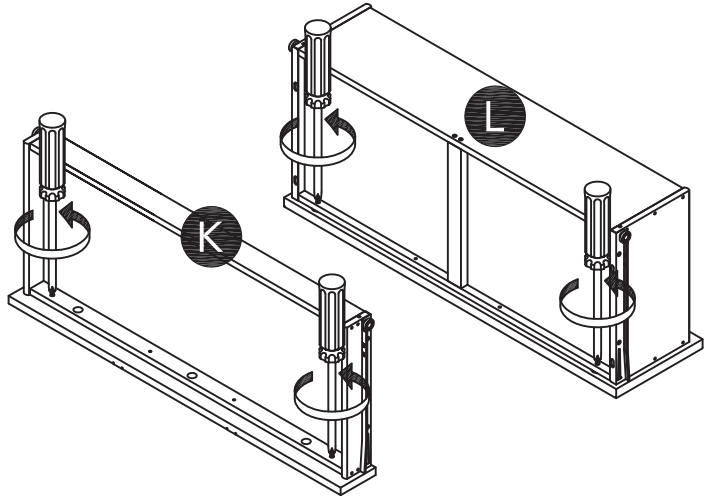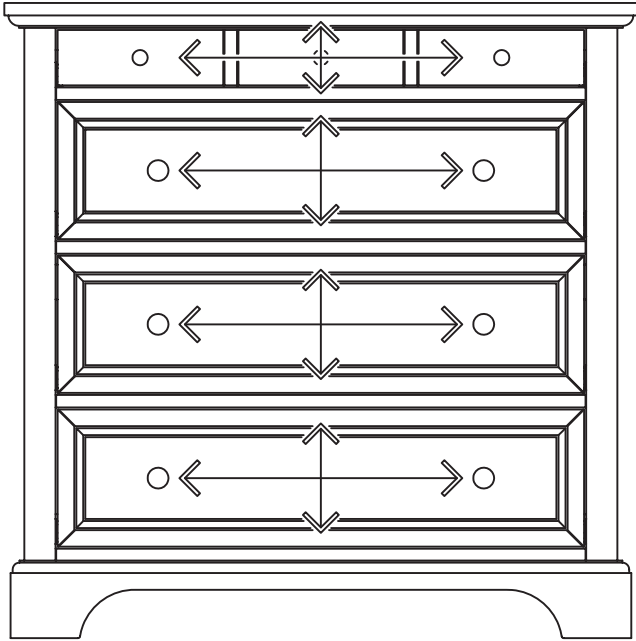

STEP 16



Insert drawers into unit, then adjust drawer front panels left or right and up or down until drawer gaps look proportional.

STEP 17

Pull each drawer open slowly, then re-tighten screws from Step 15.


Make sure drawer front panels do not move and lock drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

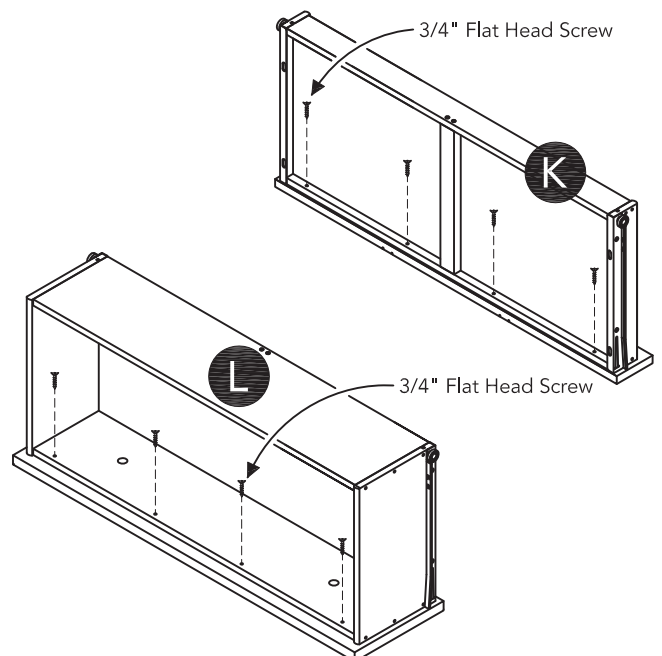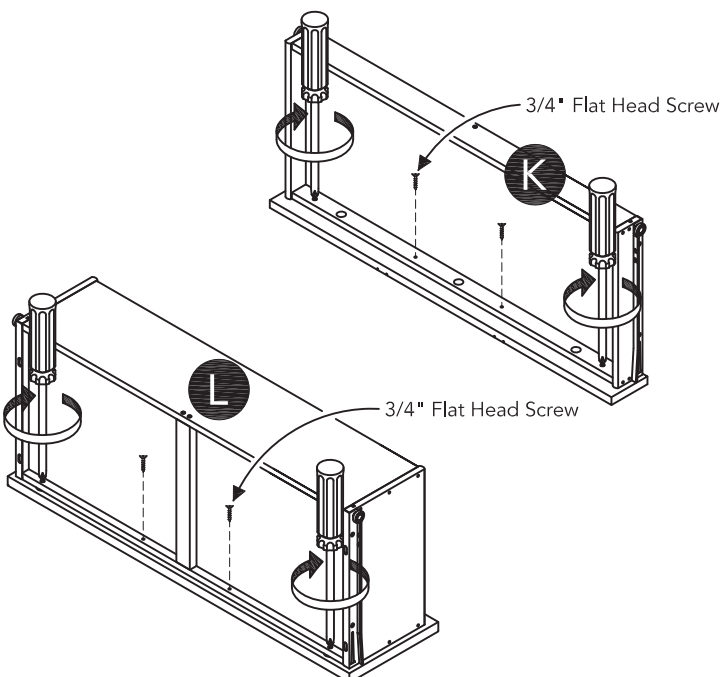

STEP 18

Slide Drawers (K) and (L) into position.

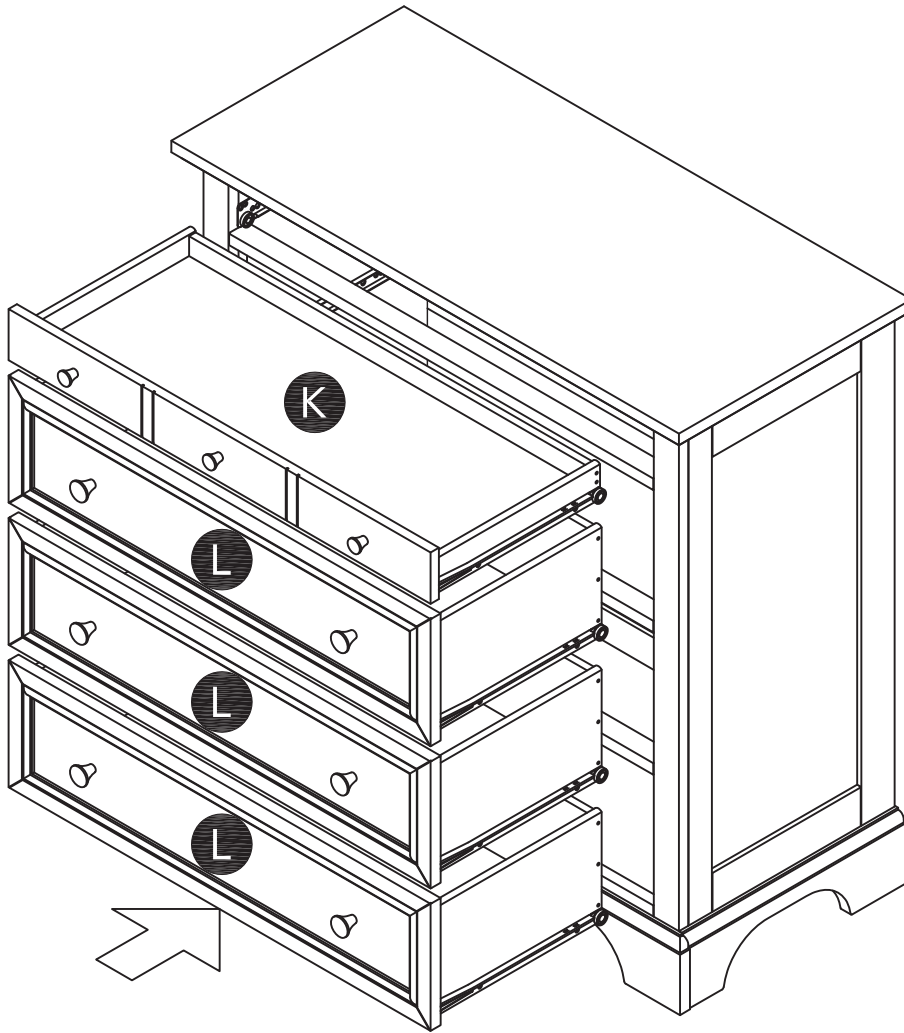

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**



Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **homestyles** is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com,
servicedesk@homestylesfurniture.com, 888-680-7460