

PALECEK®

601 PARR BOULEVARD | RICHMOND | CA 94801

MOUNTING INSTRUCTIONS LIRA OD ROPE WALL DÉCOR, BROWN 153577




These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning installation of this item.

Tools Needed: Drill, Philip head screw bit, Measuring tape, Hammer, Bubble Level, and Pencil

Parts List:

- A) Wall Decor x 1pc.
- B) Screws $\text{Ø}8 \times 1\frac{1}{4}$ " x 2 pcs
- C) Plastic Anchors $\text{Ø}6 \times 30 \text{ mm} \times 2 \text{ pcs}$

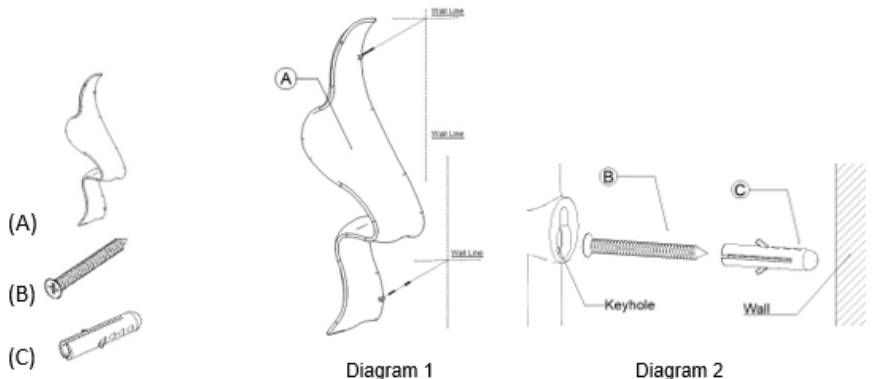

To Assemble:

1. Unpack all parts and place them on a protected work surface.
2. With the help of two people, place the wall décor in the desired location and mark the wall for drilling in line with the keyhole on the wall décor.
3. Drill 6mm x 35mm holes at the marked locations. See diagram 1.
4. Insert the plastic anchors (C) into the holes. Install the screws (B), leaving approximately 10 MM of each screw exposed from the wall. See diagram 2.
5. Align the keyhole hangers with the screw heads and lower the wall décor into place.
6. Installation is complete.

Care Instructions: Clean with a damp cloth as needed.