

PALECEK™

601 PARR BOULEVARD, RICHMOND, CA 94801

AMALFI OUTDOOR SECTIONAL ASSEMBLY INSTRUCTIONS

Please read these instructions carefully and completely before assembling this sectional configuration. These instructions apply to Items 7724-02, 7143-02, 7810-02, and 7879-02. Assembly by two (2) people is recommended.



7724-02



7810-02



7143-02



7879-02


CARE:

Dust with a soft dry cloth. Wipe up spills immediately. Clean with damp cloth. Do not use cleaning solutions or abrasives.


T. 800.274.7730 | F. 510.234.7234

PALECEK.COM


AMALFI OUTDOOR SECTIONAL ASSEMBLY INSTRUCTIONS

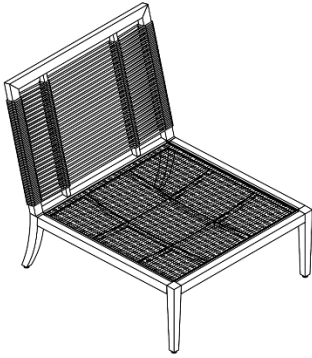


A

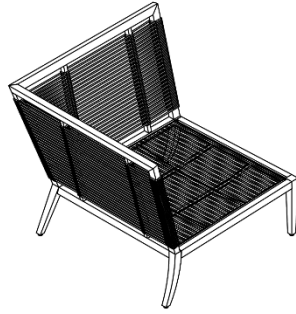


B

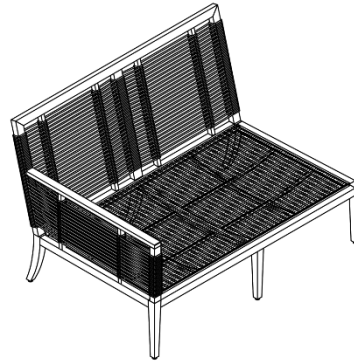


C

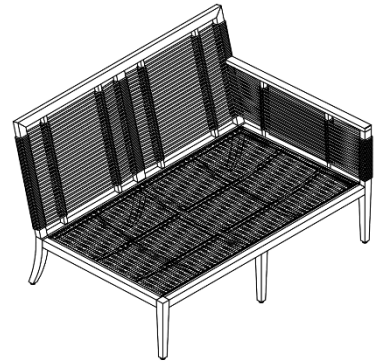


D

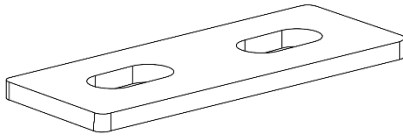

E. Connector Bracket (2x)



F. Bolt (4x)

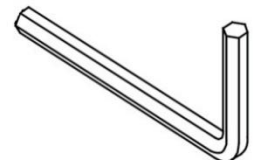

G. Allen Key (1x)

ASSEMBLY INSTRUCTIONS:

1. Place all sectional modules on a clean, level surface in the desired configuration.
2. Align the adjacent modules so that the connector mounting holes are properly aligned.
3. Position the **connector bracket (E)** over the mounting holes.
4. Insert the **bolts (F)** through the **connector bracket (E)** into the threaded inserts. Hand-tighten all bolts first.
5. Once all bolts have been installed, fully tighten them using the supplied **Allen key (G)**. Do not overtighten.
6. Repeat Steps 3–5 for each connection between adjacent modules.
7. After all connectors have been installed, verify that all modules are securely connected and properly aligned before use.
8. Adjust the levelers as needed to ensure the sectional is stable on the floor.

NOTE:

1. Each connection between two adjacent modules requires two (2) connector brackets and four (4) bolts.
2. Assembly by two (2) people is recommended.
3. Assemble the sectional on a clean, level surface to help prevent damage to the product.


CARE:

Dust with a soft dry cloth. Wipe up spills immediately. Clean with damp cloth. Do not use cleaning solutions or abrasives.

PALECEK™

601 PARR BOULEVARD, RICHMOND, CA 94801

AMALFI OUTDOOR SECTIONAL ASSEMBLY INSTRUCTIONS

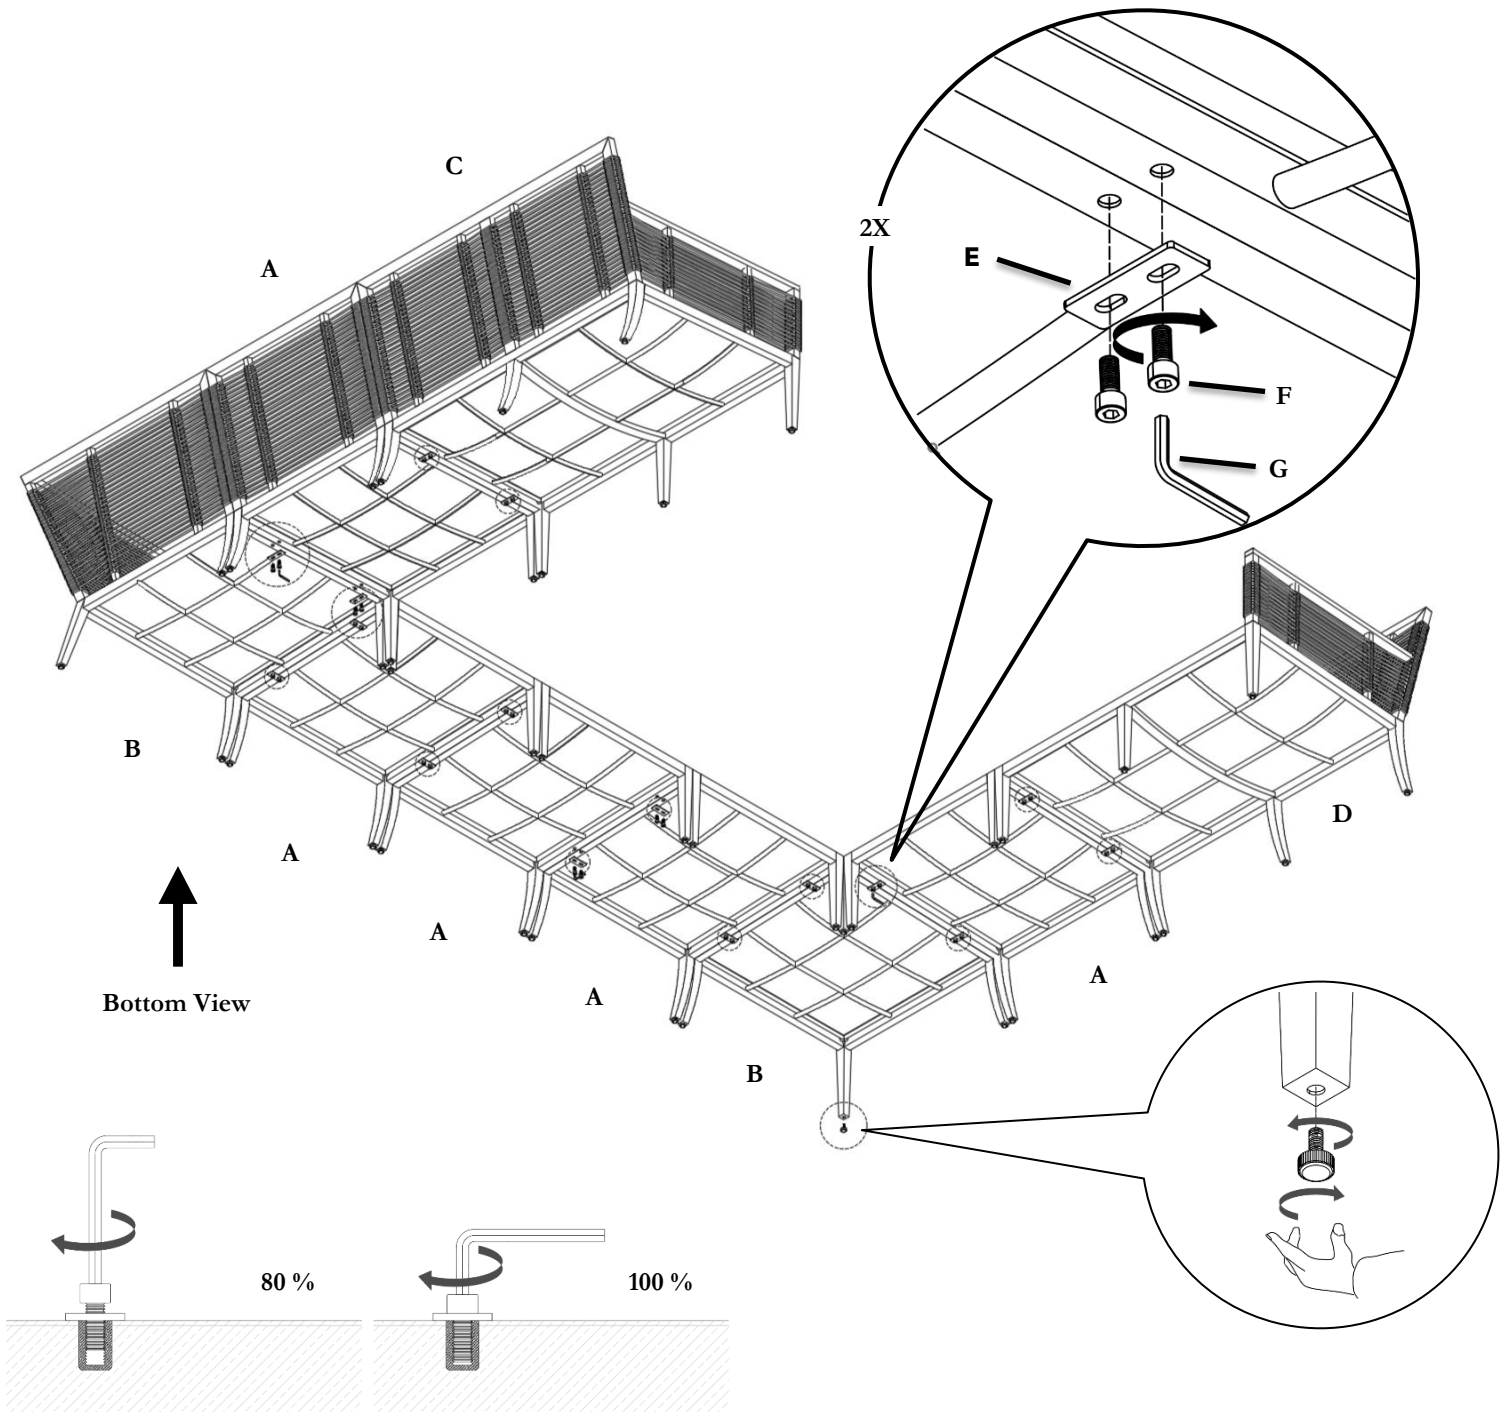

CARE:

Dust with a soft dry cloth. Wipe up spills immediately. Clean with damp cloth. Do not use cleaning solutions or abrasives.


T. 800.274.7730 | F. 510.234.7234

PALECEK.COM


PALECEK™

601 PARR BOULEVARD, RICHMOND, CA 94801


AMALFI OUTDOOR SECTIONAL ASSEMBLY INSTRUCTIONS

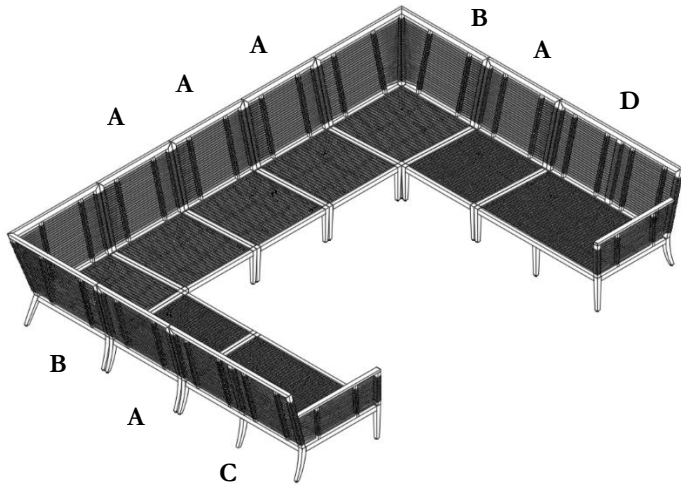


Configuration 1

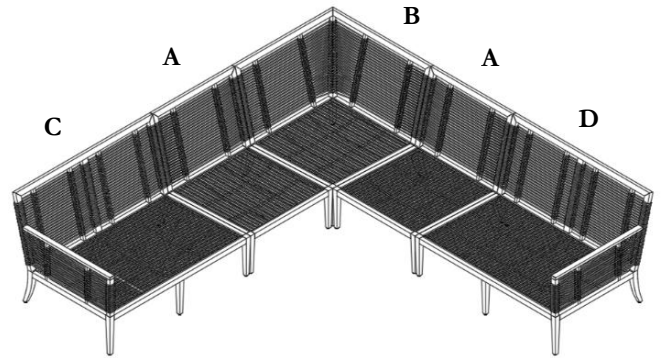


Configuration 2

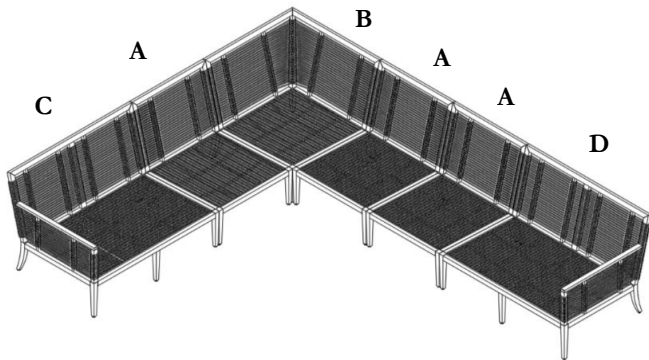


Configuration 3

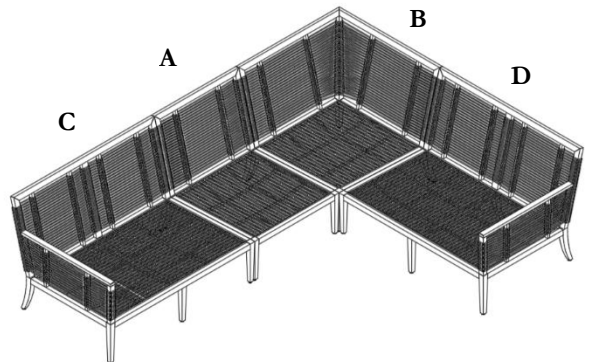

Configuration 4

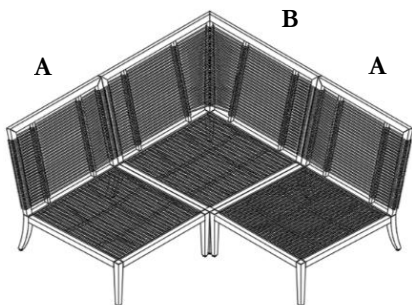

Configuration 5

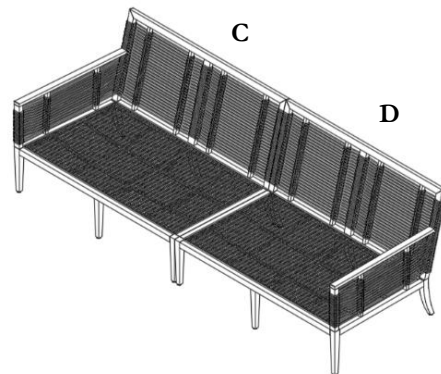

Configuration 6

CARE:

Dust with a soft dry cloth. Wipe up spills immediately. Clean with damp cloth. Do not use cleaning solutions or abrasives.


T. 800.274.7730 | F. 510.234.7234

PALECEK.COM


PALECEK™

601 PARR BOULEVARD, RICHMOND, CA 94801


AMALFI OUTDOOR SECTIONAL ASSEMBLY INSTRUCTIONS

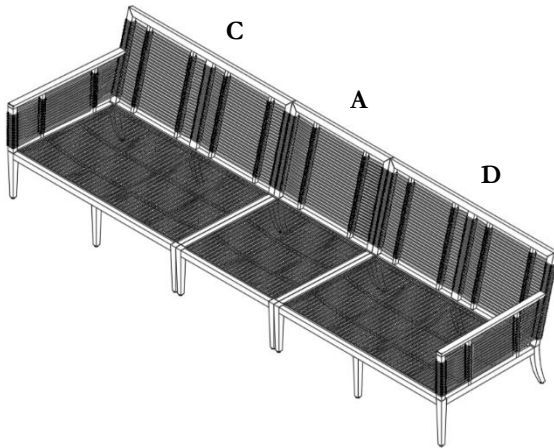


Configuration 7

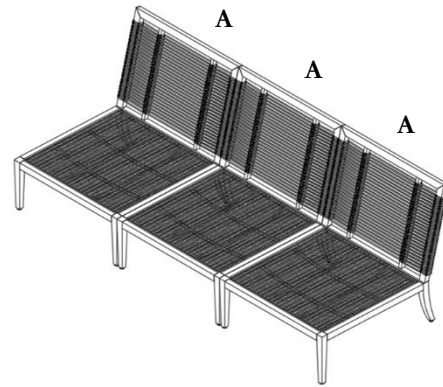

Configuration 8

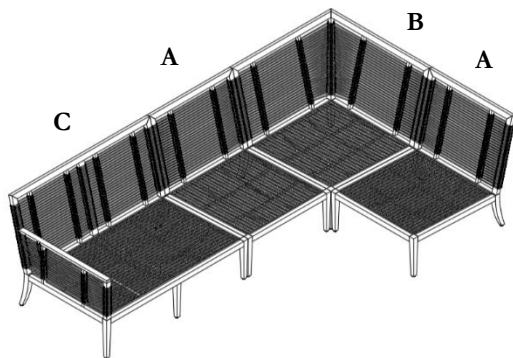

Configuration 9

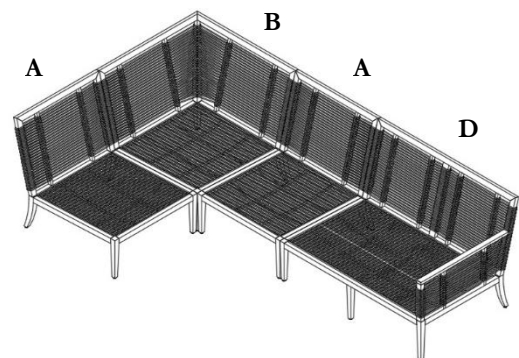

Configuration 10

CARE:

Dust with a soft dry cloth. Wipe up spills immediately. Clean with damp cloth. Do not use cleaning solutions or abrasives.

T. 800.274.7730 | F. 510.234.7234

PALECEK.COM