

PALECEK®

601 PARR BOULEVARD | RICHMOND | CA 94801

ASSEMBLY INSTRUCTIONS TIVOLI OD COFFEE TABLE MEDIUM, EARTH 784977








These instructions are provided for your convenience. It is very important that they are read carefully and completely before beginning installation of this item.

Tools Needed: Allen Wrench (F)

Parts List:

- A) Table Top 1pc.
- B) Table Base 1pc.
- C) Allen Bolt M8 x 25MM 4pcs
- D) Lock Washer 4pcs
- E) Washer 4pcs

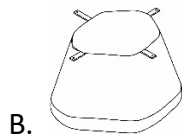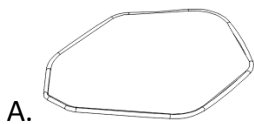

To Assemble:

1. Unpack the box and ensure that all parts are accounted for.
2. Place the table top in an upside-down position on a clean surface near your desired location.
3. With assistance from 3 - 4 persons (recommended), carefully position the table base upside down onto the table top with the holes aligned.
4. Thread the Allen Bolt (C) through the Lock Washer (D), then the Washer (E), and insert the bolt assembly into the plate hole. Do not tighten until all bolt assemblies have been inserted into the remaining holes. Once all bolts are in place, use the Allen Wrench (F) to tighten securely.
5. Carefully turn the table into an upright position with 3 – 4 persons.
6. Use the adjustable levelers to ensure the base does not wobble on uneven floor surface, by rotating them counter-clockwise until they make proper contact with the floor.
7. Assembly is now complete.

Care Instructions: Dust with a dry cloth. Wipe up spills immediately. Clean with a damp cloth as needed. For the weaving, use a gentle fabric stain remover.