





ASSEMBLY INSTRUCTION

ITEM# 5845-90867-99 Collette 6/0-6/6 Headboard
5845-90851-99 Collette 6/0-6/6 Headboard

**Caution: Please make sure you have all parts indicated below prior to assembly.
This Headboard is heavy and can best be assembled with the help of two or more people.**

NO.	HARDWARE LIST		Q'TY
M		1/4" Bolt	2
R		Allen wrench	1
U		Flat washer	2
V		Lock washer	2

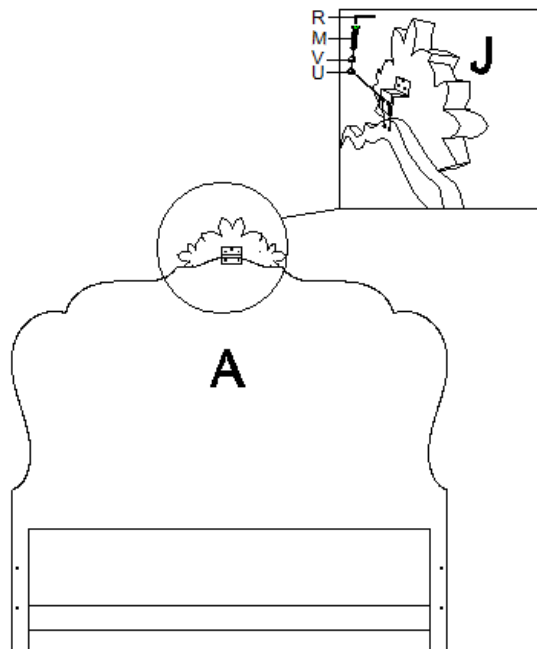
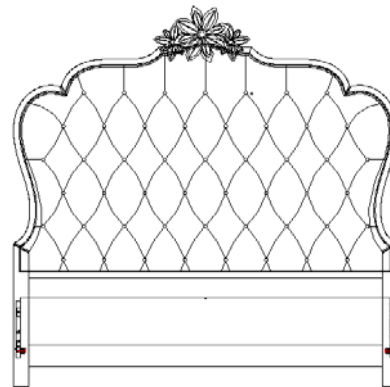


Diagram 1

Assembly steps:

1. Sit crown molding (J) on top of headboard (A). Align holes at metal plate on back of crown molding and the pre-drilled holes on back of headboard top, tighten up metal plate by using bolts (M), lock washers (V) and flat washers (U) with Allen wrench (R). (See Diagram 1).

Cleaning Instruction: Clean finished parts with a mild dishwashing liquid and water solution on a damp cloth. Polish the finish with soft cloth and an industry recognized furniture polish.